

Entering Interactive DEMO Mode - Washers

Starting Point: ready state after appliance switches on

Appliance will be started with first program activated (in this example: Eco 40-60)

- To enter interactive demo mode:
 - Press and Hold spin speed down button
 - Activate program position 5 (in this example: Delicates/Silk)
 - Release spin speed down button
 - Successful activation of the demo mode will be confirmed with "SHOP" in display
 - NOTE: Activation of the demo mode is only possible within 30 sec after booting the appliance

To leave interactive demo mode:


- Switch on the appliance
- Wait until ready state is shown
- Press any button (but not start button)
- Press and Hold Start Button for 5 sec
- Note: Only possible within 30 Sec after within 30 sec after booting the appliance

General Note: Interactive Demo mode <u>will not be deactivated</u> by switching off the appliance or after main black out

1 2022-06-20 NEW PREMIUM WASCHERS

B/S/H/

Intern

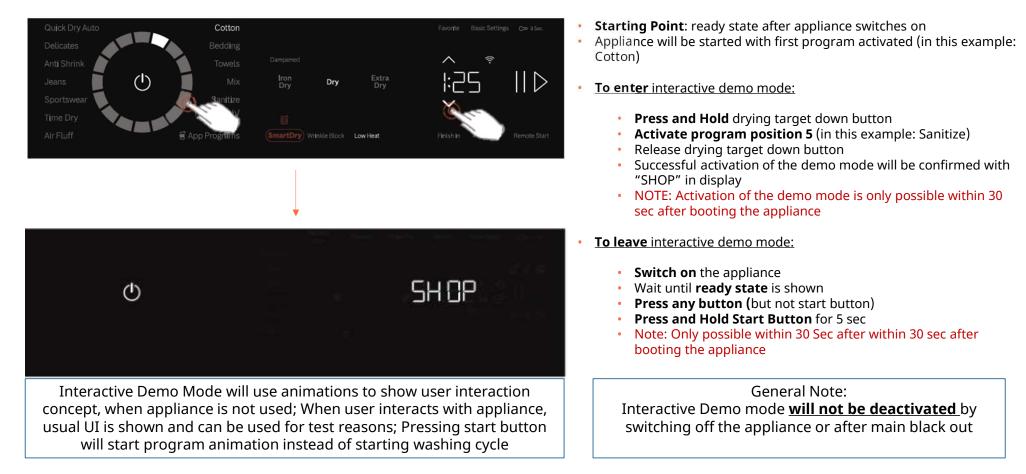


Entering Interactive DEMO Mode - Dryers

2 2022-06-20 NEW PREMIUM WASCHERS

B/S/H/

Intern

Interactive DEMO Mode – Process description

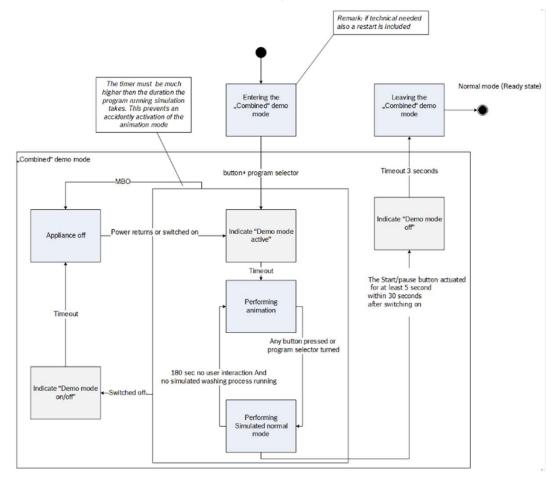

3 2022-06-20 NEW PREMIUM WASCHERS

Intern

B/S/H/