300 Series Washer - WGA12400UC





WGA12400UC White

The 300 series washer is a perfect companion piece to the 300 series dryer, matching in quality, performance and design.

Features & Benefits

SpeedPerfect® provides up to 40% faster washing time*.

EcoSilence™ motor delivers quiet, efficient & long lasting performance.

At 2.2 cu. ft., Bosch washers are compact in size without sacrificing capacity so you can fit a variety of loads.

General Properties	
Tub material	Stainless Steel
Maximum spin speed	1,400 rpm
Interior light	No
Leak protection systems	Reinforced Hose
Internal water heater	Yes
Stackable	Yes with Stacking Kit Accessory
Silence level – washing	52 dBA
Silence level – spinning	72 dBA
Programs (No.), [Special]	(15), [Allergen, Jeans, Heavy Duty
Options (No.), [Special]	(6), [SpeedPerfect®, PreWash]
Energy consumption	84 kWh/yr
Water consumption	2,379 gal/yr
ENERGY STAR® certified	Yes
Capacity	
Capacity	2.2 cu. ft.
	2.2 00.70.
Design Elements	2.2 00. 10.
	White
Design Elements	
Design Elements Door ring	White
Design Elements Door ring Control type	White Touch
Design Elements Door ring Control type Dial	White Touch White
Design Elements Door ring Control type Dial Bosch logo on door glass	White Touch White
Design Elements Door ring Control type Dial Bosch logo on door glass Technical Details	White Touch White No
Design Elements Door ring Control type Dial Bosch logo on door glass Technical Details Watts	White Touch White No 2,520 W
Design Elements Door ring Control type Dial Bosch logo on door glass Technical Details Watts Circuit breaker	White Touch White No 2,520 W 15 A**
Design Elements Door ring Control type Dial Bosch logo on door glass Technical Details Watts Circuit breaker Volts	White Touch White No 2,520 W 15 A** 208/220-240 V
Design Elements Door ring Control type Dial Bosch logo on door glass Technical Details Watts Circuit breaker Volts Current	White Touch White No 2,520 W 15 A** 208/220-240 V 10.5 A
Design Elements Door ring Control type Dial Bosch logo on door glass Technical Details Watts Circuit breaker Volts Current Frequency Power Cord (included)	White Touch White No 2,520 W 15 A** 208/220-240 V 10.5 A 60 Hz (Yes) [240V; NEMA
Design Elements Door ring Control type Dial Bosch logo on door glass Technical Details Watts Circuit breaker Volts Current Frequency Power Cord (included) [Type]	White Touch White No 2,520 W 15 A** 208/220-240 V 10.5 A 60 Hz (Yes) [240V; NEMA 6-15, 3-prong]
Design Elements Door ring Control type Dial Bosch logo on door glass Technical Details Watts Circuit breaker Volts Current Frequency Power Cord (included) [Type] Power cord length	White Touch White No 2,520 W 15 A** 208/220-240 V 10.5 A 60 Hz (Yes) [240V; NEMA 6-15, 3-prong] 63" (Full Length)

33 1/4" x 23 1/2" x 24 1/4"
158 lbs
67 3/4"

†ADA compliance

- Meets ADA height and access requirements when installed on pedestal.
- Meets ADA operable parts requirements for controls and detergent dispenser.

Accessories

Dryer Stacking Kits





WTZ11400UC Kit w/ Shelf

WTZ20410UC Kit w/out Shelf

WTZSB30UC Kit w/Brackets

Necessary only when stacking a matching Bosch dryer on top of washer. Shown here for reference only.

Power Adapters







WTZPA20UC 4-Prong

WTZPA30US 3-Prong

Matching Bosch Dryers are supplied with WTZPA20UC adapter to fit a standard 4-Prong, 30A, Dryer receptacle (NEMA 14-30R) to power both Bosch Washers and Dryers.

Note: - 3-Prong Adapter may be ordered directly from Bosch (not supplied with Washer or Dryer).

> - Use of two individual NEMA 6-15R or 6-20R receptacles/circuits may be used as alternative means to power Washer and Dryer.



WMZPW20W Washer Pedestal







^{*}As compared to Perm Press Heavy Soil cycle without SpeedPerfect®

Accessories: To purchase Bosch accessories, cleaners & parts please visit www.bosch-home.com/us/store or call 1-800-944-2904 (Mon to Fri 5 am to 6 pm PST). Sat 6 am to 3 pm PST). Notes: All height, width and depth dimensions are shown in inches. BSH reserves the absolute and unrestricted right to change product materials and specifications, at any time, without notice. Consult the product's installation instructions for final dimensional data and other details prior to making cutout.


Warranties: Please see Use & Care manual or Bosch website for statement of limited warranty.


^{**}Stated circuit breaker size is if the appliance is plugged into an individual 240/208V, 15A minimum branch circuit.

300 Series Washer - WGA12400UC



Installation Details

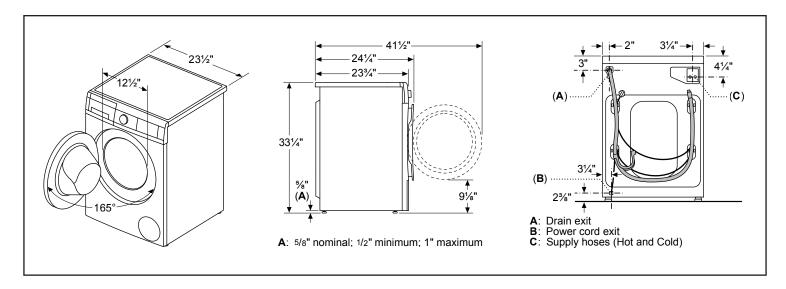

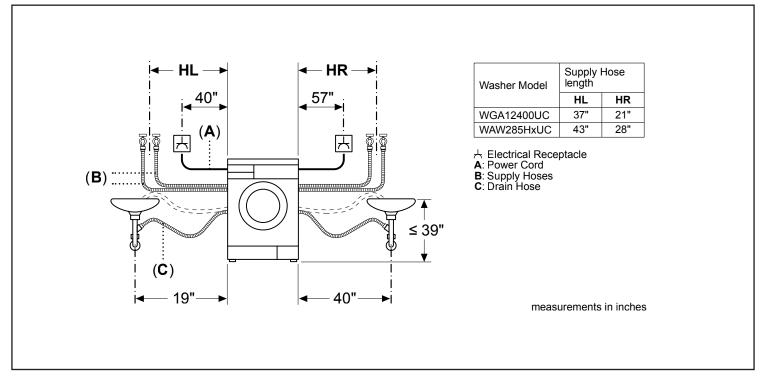

Accessories: To purchase Bosch accessories, cleaners & parts please visit www.bosch-home.com/us/store or call 1-800-944-2904 (Mon to Fri 5 am to 6 pm PST, Sat 6 am to 3 pm PST).


Notes: All height, width and depth dimensions are shown in inches. BSH reserves the absolute and unrestricted right to change product materials and specifications, at any time, without notice. Consult the product's installation instructions for final dimensional data and other details prior to making cutout.

Warranties: Please see Use & Care manual or Bosch website for statement of limited warranty.

300 Series Washer - WGA12400UC




Installation Details

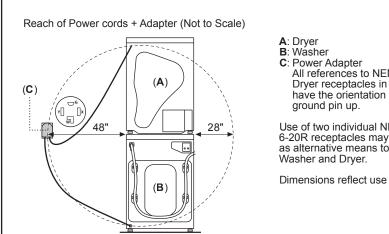


All references to NEMA 14-30R Dryer receptacles in this document have the orientation with the

Use of two individual NEMA 6-15R or 6-20R receptacles may be used as alternative means to power

Dimensions reflect use of stacking kits.

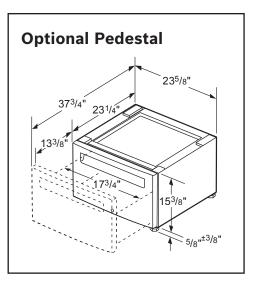

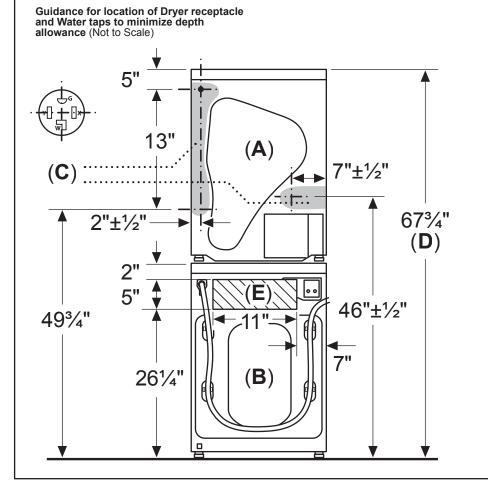

- A: Dryer
- B: Washer
- C: Axis lines, in shaded areas, indicate Center Line of home's Dryer receptacle for minimal depth allowance if located entirely behind appliances.

 D. Minimum Stack Height (with Stacking Kit)
- E: Hatched area indicates location for home's Hot and Cold water taps/outlets for minimal depth if located entirely behind appliances.

Installer / Customer is responsible for fit, function, maintenance and safety of utility installation.

measurements in inches

Accessories: To purchase Bosch accessories, cleaners & parts please visit www.bosch-home.com/us/store or call 1-800-944-2904 (Mon to Fri 5 am to 6 pm PST). Sat 6 am to 3 pm PST). Notes: All height, width and depth dimensions are shown in inches. BSH reserves the absolute and unrestricted right to change product materials and specifications, at any time, without notice. Consult the product's installation instructions for final dimensional data and other details prior to making cutout.


Warranties: Please see Use & Care manual or Bosch website for statement of limited warranty.

300 Series Washer - WGA12400UC




Installation Details


Closet: Stacked Washer and Condensation Dryer

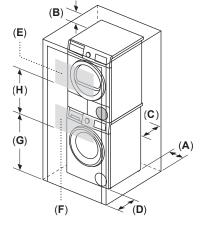

Closet: Stand Alone (shown)

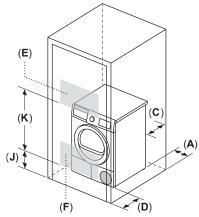

or Side by Side

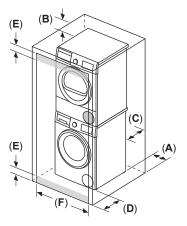

Closet: Stacked Washer

with Heat Pump Dryer

Minimum clearance requirements

(Stacked, Stand Alone or Side by Side): **A**: Both sides (left and right) – 5/8"

- **B**: Top $-6\frac{1}{4}$ "
- C: Rear 21/2"
- D: Front 21/2'

Minimum louvered area and spacing:

- E: Top louver area 63 sq. in. F: Bottom louver area 63 sq. in.
- G: Lower Height (stacked) 37

- H: Upper Height (stacked) 26"
 J: Lower Height (stand alone) 3"
 K: Upper Height (stand alone) 29"

For shortest drying times keep closet door open while dryer is operating. When closet doors are closed, open areas only allow minimal drying results (expect long drying times).

Minimum clearance requirements

(Stacked, Stand Alone or Side by Side):


- A: Both sides (left and right) 1/2
- **B**: Top 61/4 **C**: Rear 3"
- **D**: Front ½"

- Minimum door undercut (louvered area): E: Undercut height (Top and Bottom) 1¼" Louvered areas of equal total sizes and split between upper and lower portions of door are permitted.
- F: Undercut width (Top and Bottom):

 24" minimum for Stacked and Stand Alone
 - 48" minimum for Side by Side

For shortest drying times keep closet door open while dryer is operating. When closet doors are closed, open areas only allow minimal drying results (expect long drying times).

Under Counter (Preferred)

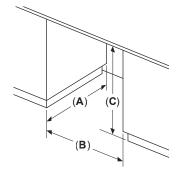


Minimum opening dimensions:

- **A**: Depth 28" **B**: Width 231/8"

Front of appliance fully open.

C: Height - 341/2" No doors or coverings.

Under Counter Enclosed (Less Preferred)

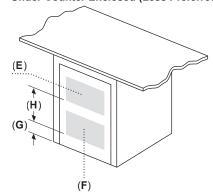

If the front of the appliance is covered, louvered openings must be installed as shown and front/rear clearances adhered to according to closet installations.

Minimum louvered area and spacing:

- E: Top louver area 63 sq. in.
- F: Bottom louver area 63 sq. in.
- G: Lower Height 3"
- H: Upper Height 14"

For shortest drying times keep cabinet door open while dryer is operating. When cabinet door is closed, open areas only allow minimal drying results (expect long drying times).

measurements in inches

Accessories: To purchase Bosch accessories, cleaners & parts please visit www.bosch-home.com/us/store or call 1-800-944-2904 (Mon to Fri 5 am to 6 pm PST). Sat 6 am to 3 pm PST). Notes: All height, width and depth dimensions are shown in inches. BSH reserves the absolute and unrestricted right to change product materials and specifications, at any time, without notice. Consult the product's installation instructions for final dimensional data and other details prior to making cutout.

Warranties: Please see Use & Care manual or Bosch website for statement of limited warranty.

For more information on our entire line of products, go to www.bosch-home.com/us or call 1-800-944-2904